


Instructions

January, 2013

E87010-A0240-T003-A1-49PS
Protective Shields for Contactors & Starters
Class 40 & 14, Size: 1-4
Cat. No. 49PSC1, 49PSC2, 49PSC3, 49PSC4, 49PSS1,
49PSS2, 49PSS3 & 49PSS4.

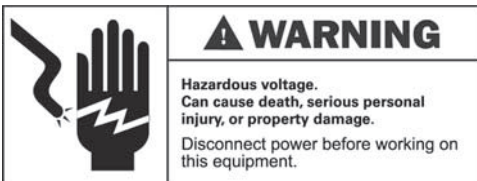

Description

Protective shields are used on contactors and/or starters to add a cover over the contactors and starters while providing access to the terminals and reset buttons.


The cover is used for both starters with solid state and bi-metal overloads.

Contents of kit

- 1 - D75016 Protective shield for size 00 - 1¾ starter
- OR 1 - D75017 Protective shield for size 2 - 2½ starter
- OR 1 - D75018 Protective shield for size 3 - 3½ starter
- OR 1 - D75019 Protective shield for size 4 starter
- OR 1 - D75020 Protective shield for size 00 - 1¾ contactor
- OR 1 - D75021 Protective shield for size 2 - 2½ contactor
- OR 1 - D75022 Protective shield for size 3 - 3½ contactor
- OR 1 - D75023 Protective shield for size 4 contactor
- 2 - S00332-008 Screws 3/8 in.
- 2 - D38218-001 Standoffs for size 00 - 1¾
- OR 2 - D38218-002 Standoffs for size 2 - 2½
- OR 2 - D38317-001 Standoffs for size 3 - 3½
- OR 2 - D38219-001 Standoffs for size 4

Instructions

1. Remove (2) cover screws (sizes 00 - 2½), OR (1) cover screw (size 4).
2. Replace cover screws with standoffs on size 00 - 1¾, size 2 - 2½ and size 4. Standoffs are added to size 3 - 3½ in the top two accessory mounting holes.
3. Remove protective cover from both sides of the shield
4. Mount the shield on the standoffs using 3/8 in. (S00332-008) screw(s).

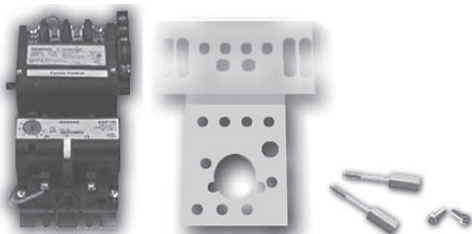

Starter with ESP200 Overload, Shield, Standoffs and Screws.

